# **Data Sheet**


# ltem

## 1. Product description:

Seamless fiber wheel with shank

Dimensions (in):	4" x 1"x 1/4"
Dimensions (mm):	100 x 25 x 6.4
Material:	Fiber
Specification:	CP MED Café W
Max. rpm:	6,900
Grit:	Medium
Optimal RPM:	1,900



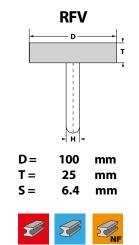

Stainless

metals

TENAZIT®















**Rotatory Tool** Die Grinder

1. Application

- · For excellent polishing and finishing of bronze, copper, brass, stainless steel, and carbon steel parts.
- · Seamless construction prevents marks on the overlap of polished surfaces.
- Excellent for working on aluminum.
- Ideal for wide surfaces, tubes, and circular cavities.
- · Leaves a continuous satin finish.

#### 2. Operating instructions

- Can be used wet or dry.
- For use with a rotary tool or drill.
- Mount the wheel and let it run idle for one minute to verify that it is not damaged.
- Do not apply excessive pressure or strike the workpiece.

#### 3. Safety information

- Never exceed the maximum speed indicated on the label.
- Always use safety guards.
- · Always wear complete personal protective equipment (gloves, hearing protection, mask, and safety glasses).
- Improper use may cause serious injury.

### 4. Handling

- The initial inspection must be carried out in the original box. If there is visible evidence of damage to the packaging, the product should not be accepted.
- Handle the wheels carefully to prevent tearing or cracking. If a product breaks, loses a section, or shows signs of damage, it must not be mounted.

#### 5. Storage

• Store the product on a flat surface at least 10 cm (4 in) above the ground, away from damp, cold, or hot surfaces, or any type of fluid.

The ideal storage conditions for these products are 40–50% relative humidity and a temperature between 15 °C and 29 °C (59 °F and 84 °F).

#### 6. Packaging units

• 1 piece.